

REMOTE CONTROLLED DOG TRAINING COLLARS

OWNER' S MANUAL



Dogtra Company

1250 E. 223rd Street, Suite 119
Carson, CA 90745
Tel : (310) 522-1800
Fax : (310) 522-1805
Web Site : www.dogtra.com
Toll Free: 1-888-811-9111



dogtra® 2000 T&B SERIES
Training and Beeper Collar



Dogtra Company

TABLE OF CONTENTS

• OVERVIEW	4
• DOGTRA TRAINING & BEEP COLLAR	5
• dogtra® 2000 T&B FEATURES	6
• dogtra® 2000 T&B PACKAGE CONTENTS	6
• dogtra® 2000 T&B TRANSMITTER & COLLAR PARTS	7
• OPERATING dogtra® 2000 T&B SERIES	10
• CHARGING THE BATTERY	14
• ACCUSTOMING THE DOG TO THE BEEPER SOUND	16
• WARRANTY AND REPAIR INFORMATION	17

THANK YOU FOR CHOOSING A dogtra® COMBINATION TRAINING/BEEPER COLLAR!

The dogtra Training and Beeper (dogtra 2000 T&B), remote training system will give you the ability to keep track of your dog's location when he is out of sight or on point.

The dogtra 2000 T&B is also a training collar that can be used for behavior management.

The dogtra combination training/beeper collars are waterproof, lightweight and reliable. They are built to withstand the most rugged conditions that dogs often encounter.

The use of a sound booster element makes the beeper easier to hear from further away. However, the actual distance from which any beeper can be heard will vary depending on your position relative to your dog and the direction of the wind.

The use of microcomputer technology, digital circuitry and Ni-MH batteries make both the collar and transmitter compact and very reliable.

dogtra® TRAINING & BEEPER COLLAR

The dogtra 2000 T&B has stimulation controlled from the transmitter. It also has a remote beeper with three modes. In the "Run/Point" mode, it beeps every five seconds when the dog is running and every two seconds when the dog is on point. In "Point" mode, the collar is silent until the dog stops, and then it beeps every two seconds. In the "Locate" mode it will beep as long as you press the "Locate" button. Otherwise the collar remains silent.

The dogtra 2000 T&B collar also comes in a two dog model. The collars are color-coded and you select between collars with a toggle switch located on the transmitter. The orange collar emits a double beep in all modes and the black collar emits a single beep in all modes. This gives you the ability to differentiate between dog when both are out of sight.

dogtra® 2000 T&B FEATURES


- E-collar range- 1 mile
- Stimulus type - “Nick”, “Constant”
- Remote controlled beeper range of 400 yards
- Three beeper modes - “Run & Point”, “Point” and “Locate”
- NiMH rechargeable batteries

dogtra® 2000 T&B PACKAGE CONTENTS

- Carrying case
- Collar with beeper
- Transmitter
- Battery charger and splitter cable
- Owner’s manual
- Test light

dogtra® 2000 T&B TRANSMITTER & COLLAR PARTS


dogtra® 2000 T&B Collar Parts

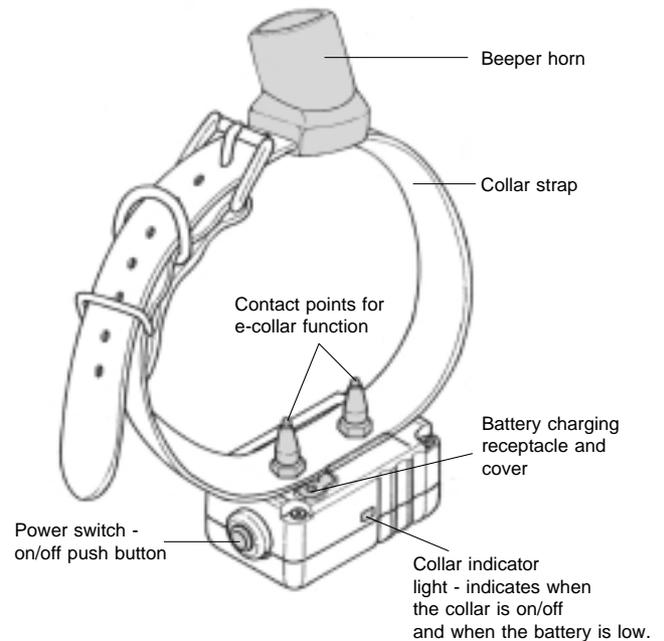

dogtra® 2000 T&B Transmitter Parts

1. Antenna
2. Stimulation intensity selection dial
3. Toggle switch (on two dog models only)
allows you to select between one of two collars
4. Battery charging receptacle and cover plug
5. Constant Button -implements constant stimulation as long as you hold the button down (for up to 12 seconds)
6. Nick Button - implements a very short single pulse of electrical stimulation.
7. Locate Button - causes the collar horn to emit a series of beeps when pushed
8. Transmitter Indicator Light - indicates when the transmitter is activated
9. Mode button- Run/point and Point mode

dogtra® 2000 T&B TRANSMITTER

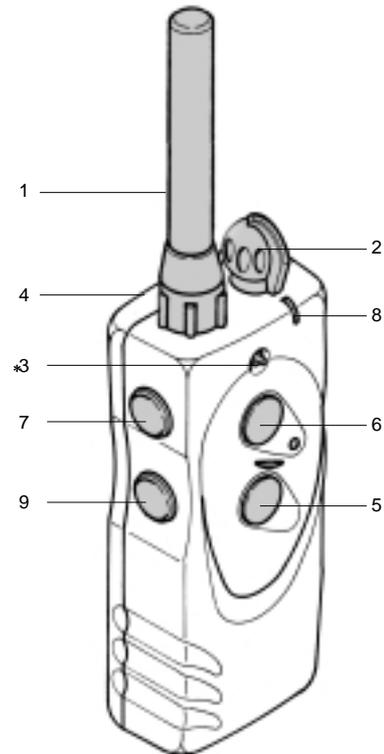

** indicates optional switch for 2 dog models.*

OPERATING THE dogtra® 2000 T&B SERIES

The dogtra 2000 T&B collar has three beeper modes along with constant and nick stimulation from the electric collar.

In the "Run/Point" mode it emits a double beep every five seconds while the dog is running. In the "Point" mode it remains silent while the dog is running. In both the "Run/Point" and "Point" mode, the collar gives a double beep every two seconds while the dog is on point.

NOTE : With two-dog systems, one collar will emit a single beep sound and one collar will emit a double beep sound to allow differentiation between the two.

In the "Locate" mode the collar is silent until the transmitter "Locate" button is pushed. The collar will emit a rapid series of beeps as long as the button is held down. The training collar features both constant and nick stimulation. Stimulation automatically shuts off if the constant button is depressed for 12 seconds or more.

The beeper function is selected with the bottom button ("Mode") and the top button ("Locate") on the side of the transmitter.

E-collar function is selected with the bottom button ("constant") and the top button ("Nick") on the front of the transmitter.

To activate the beeper unit press the MODE button on the side of the transmitter. (Note the ON/OFF button on the dog collar/receiver must be activated for the beeper to operate.)

The first time you press the MODE button, the collar will beep twice. The beeper unit will always start in the Run/Point mode where the collar beeps every five seconds when the dog is running and beeps every two seconds when the dog is stationary/on point.

To select the point mode press the MODE button a second time. The collar will beep once, it is now in the point mode where the beeper will beep every two seconds when the dog is stationary/on point and is silent when the dog is running.

To turn the beeper unit off, press the MODE button a third time. The unit will emit three rapid beeps, the beeper unit is now off.

To turn the collar on, press the on/off button on the collar and hold it down until the red indicator light comes on (about 1 second). The on/off switch has a built in delay so that the collar can not be turned off if accidentally bumped.

INTENSITY SELECTION DIAL

The intensity selection dial is located on the top of the transmitter.

Number one is the lowest level and number one hundred is the highest level.

In the fully counter clockwise position- "zero" setting- no electrical stimulation occurs even when the constant button or the nick button is pressed (a safety feature).

Moving the dial from the "zero" setting in a clockwise manner, will increase the electrical stimulation.

Conversely, moving the dial counter-clockwise will lower the stimulation level.

NOTE : Intensity can be increased or reduced during actual stimulation.

TWO DOG COLLAR

The dogtra® 2000 T&B two dog unit operates like the dogtra® 2000 T&B dog single unit. The mode difference is at the transmitter where a toggle switch allows you to select either collar.

The toggle switch is color-coded with black and orange to match the black and orange collar straps. The orange collar emits a double beep and the black collar gives a single beep so you can distinguish between dogs when they are out of sight.


The two-dog models have a toggle switch on the face of the transmitter located above the "Nick" button. The toggle switch allows for selection of either collar.

Set the toggle switch on the orange position to select the orange collar and the black position to select the black collar.

CHARGING THE BATTERY

BATTERY CHARGER PARTS

- Charger- AC adapter and lead.
- Battery Charging Cable- This cable allows you to charge both the collar and transmitter at the same time. The single lead connects with the charger lead. The two identical leads go into the collar receptacle and/or the transmitter receptacle. They are interchangeable between the transmitter and collar.
- Two dog model includes an adapter charger lead for (2)two collars and the transmitter.

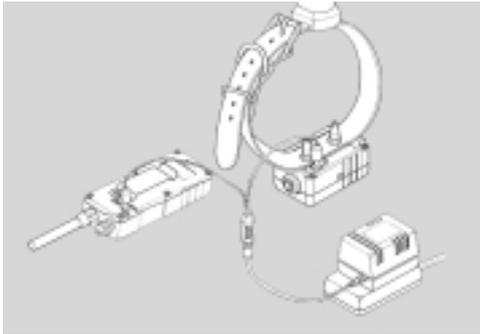

BATTERY CHARGING

When the batteries need recharging, the LED light will emit a rapid, double flash every 2 seconds. If the batteries have been allowed to run completely down, the indicator light may not come on at all.

Be sure to turn off the collar receiver before charging.

To charge the batteries, connect the splitter cable and battery charger. Plug into the receptacles on the collar and transmitter then plug the charger into a household receptacle. Recharge the batteries for 14 hours. (See: Battery Charging Diagram)

Both the collar receiver and transmitter indicator light will glow continuously while charging the batteries.

After disconnecting the cable, close the receptacle covers. Be sure the rubber plugs are completely seated over the receptacle to prevent dirt from entering.

ACCUSTOMING THE DOG TO THE BEEPER SOUND

Turn on the beeper collar and leave it outside the dog's kennel area for about a half-hour.

Repeat this several times, until you can see that the dog disregards the beeper.

Next, fill the speaker horn with tissue paper to muffle the sound. Fit the beeper collar on the dog. Gradually, remove some of the tissue paper as the dog becomes accustomed to the beeping sound.

Now, when you take him hunting, he will be accustomed to the beeper sound.

WARRANTY AND REPAIR INFORMATION

Warranty Repair

Dogtra Company provides the original purchaser a one year limited warranty on parts and labor from the date of the original purchase. The warranty does not cover failure resulting from damage, abuse or loss of parts. The warranty is void if the unit has been altered or an unauthorized person has attempted work.

A copy of the sales receipt showing purchase date is required before warranty work is begun.

Write a note briefly explaining the problem and include your name, address, city/state/zip code, daytime and evening phone numbers.

Ship to :
Dogtra Company
1250 E. 223rd Street, Suite 119
Carson, CA 90745

For any questions concerning your dogtra products call us Toll Free at 1-888-811-9111.

REPAIR

Out of Warranty Repair

For repair work that is no longer covered by warranty, the cost of repair will include parts, labor and shipping. Write a note briefly explaining the problem. Include your name, address, city/state/zip code, daytime phone number and evening phone number.